

Customize Layout Using VIA

- 1. Go to https://usevia.app/
- 2. Go to design tab

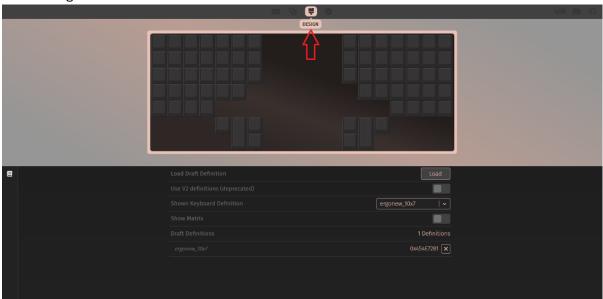

3. Press Load button and load keymap.json from ErgodashVia folder

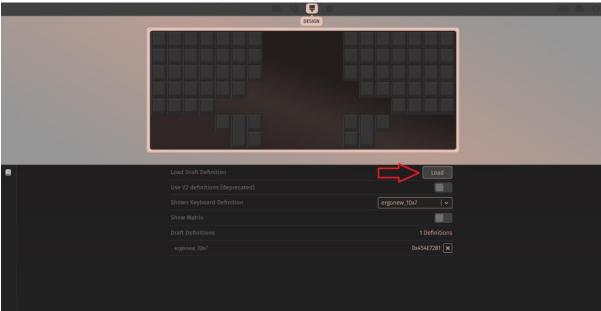

4. Connect ErgoDash keyboard to PC and Authorize Device




5. Customize keyboard!!



How to upgrade keyboard firmware

- 1. Prepare .hex file
- 2. Download QMK Toolbox from https://qmk.fm/toolbox
- 3. Open QMK Toolbox
- 4. Select .hex file
- 5. Connect keyboard to PC
- 6. Press reset button located here

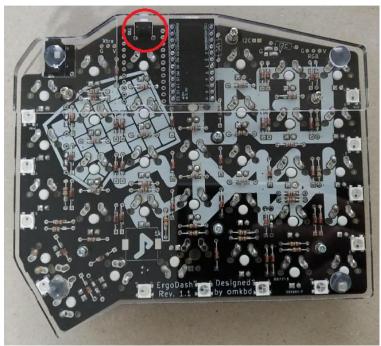

7. Until QMK Toolbox flash button light up and then press flash button

